
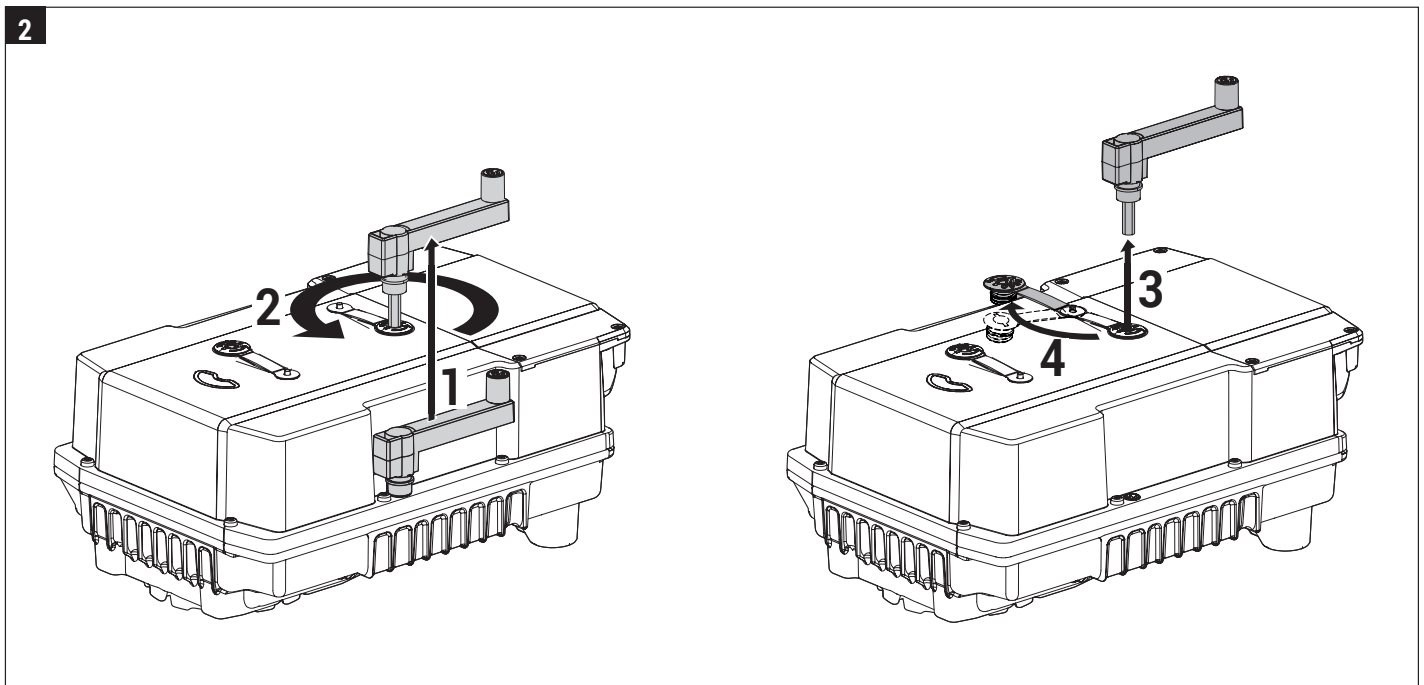
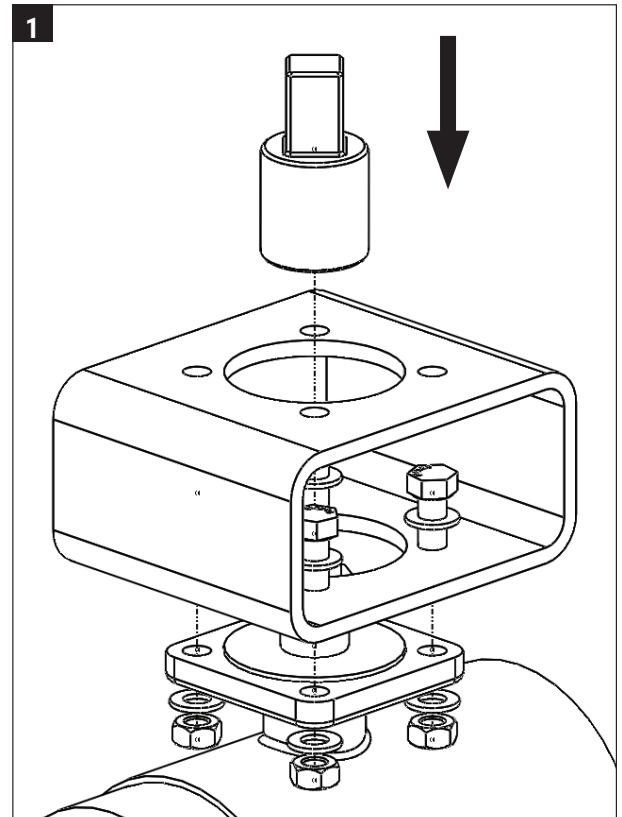
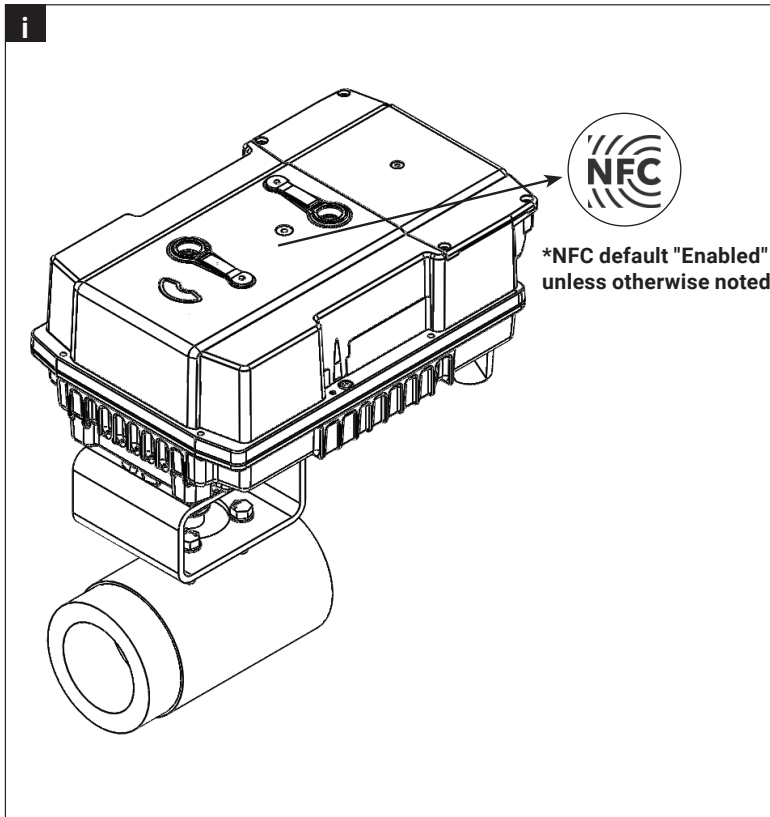
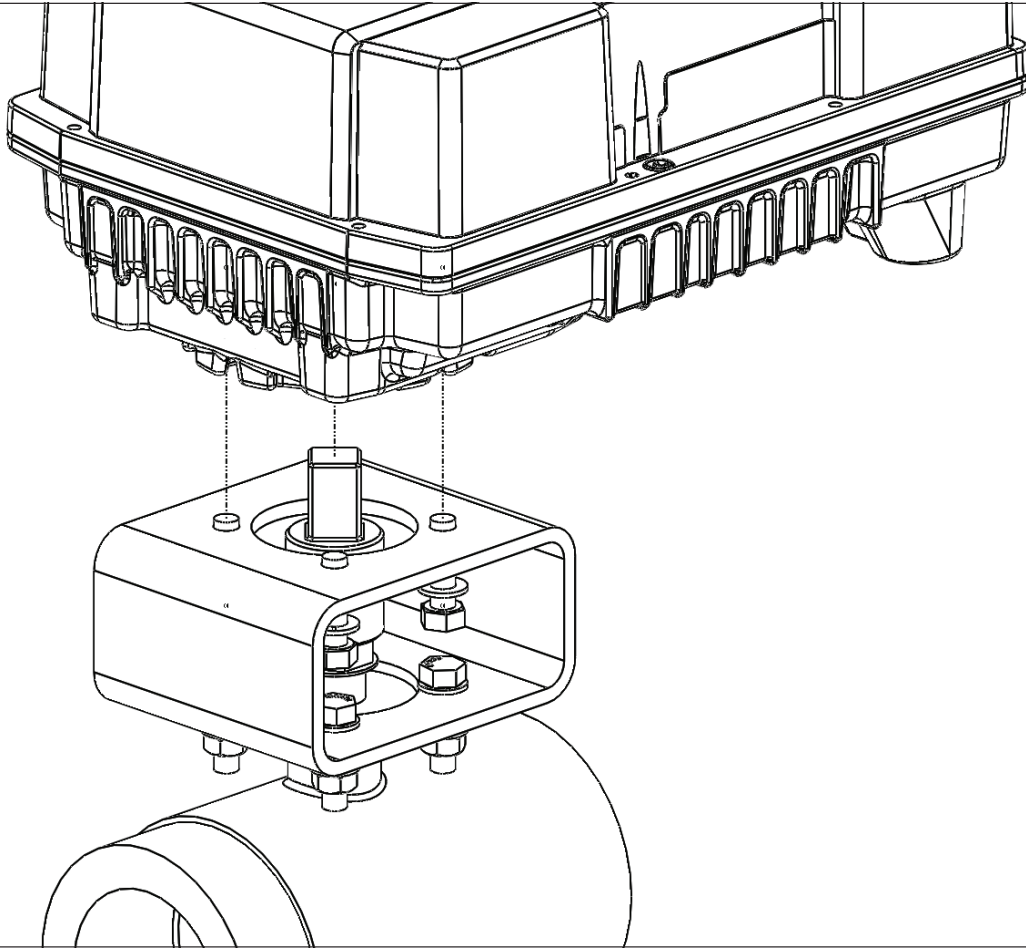





PR and PKR Actuators with VS / VSS & V Ball Valves

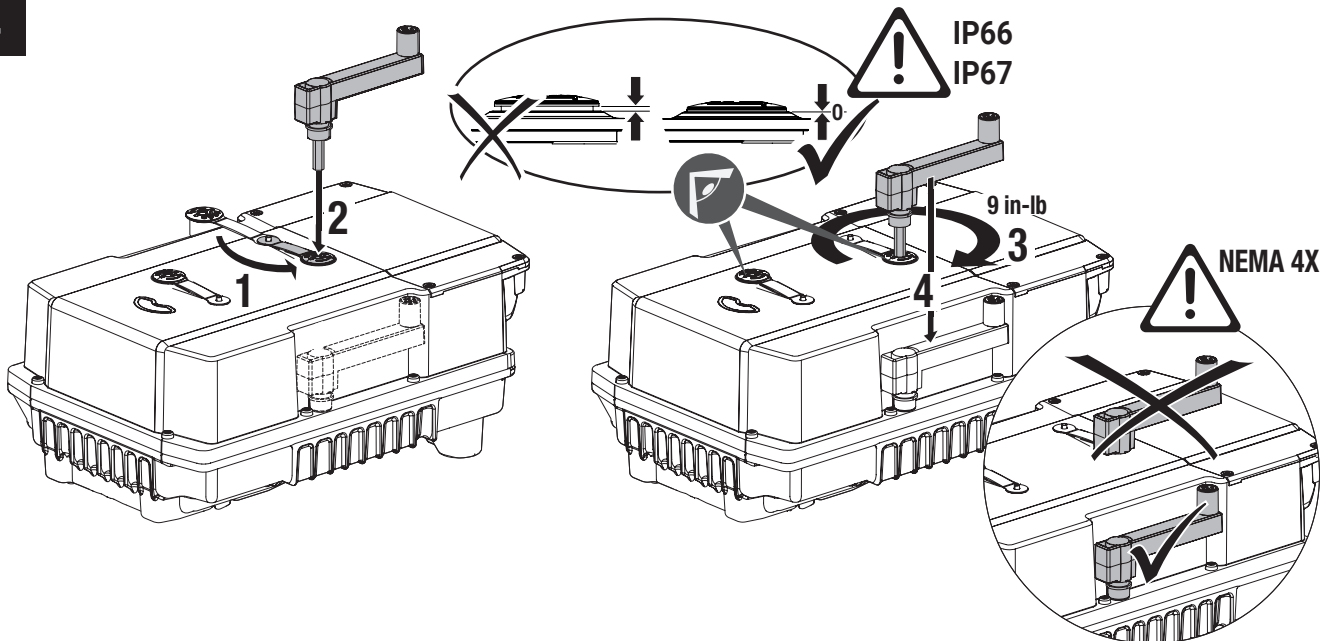


PR and PKR Actuators with VS / VSS & V Ball Valves

3**4**

PR and PKR Actuators with VS / VSS & V Ball Valves




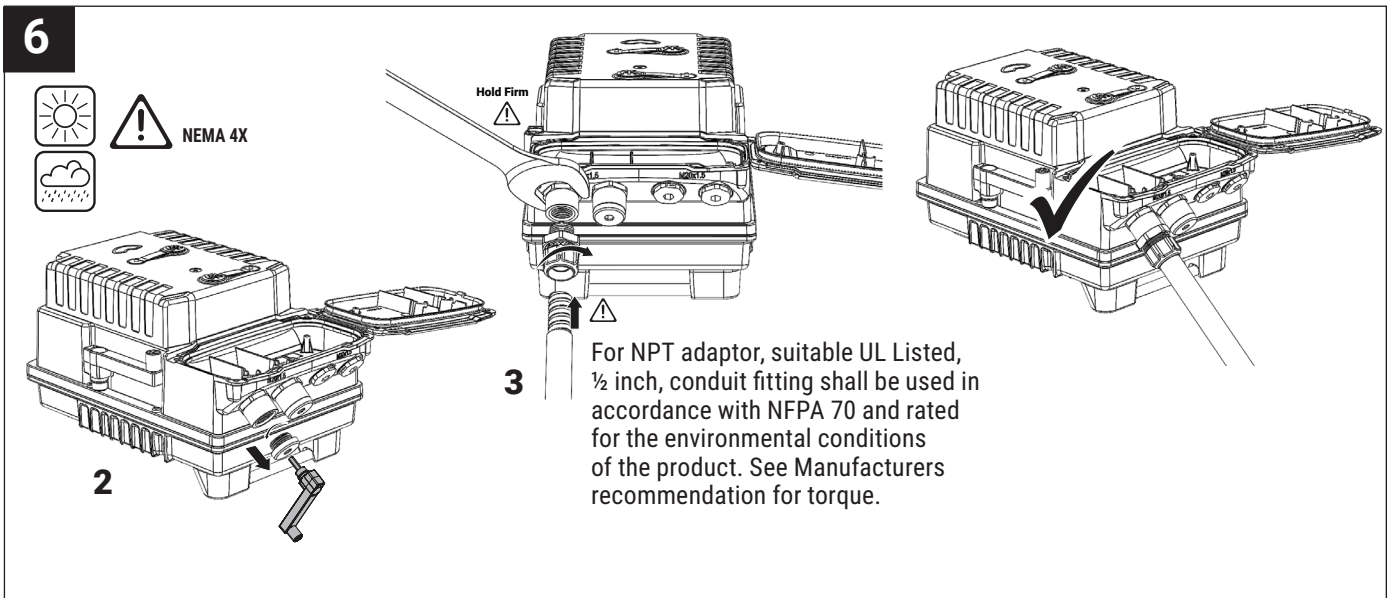
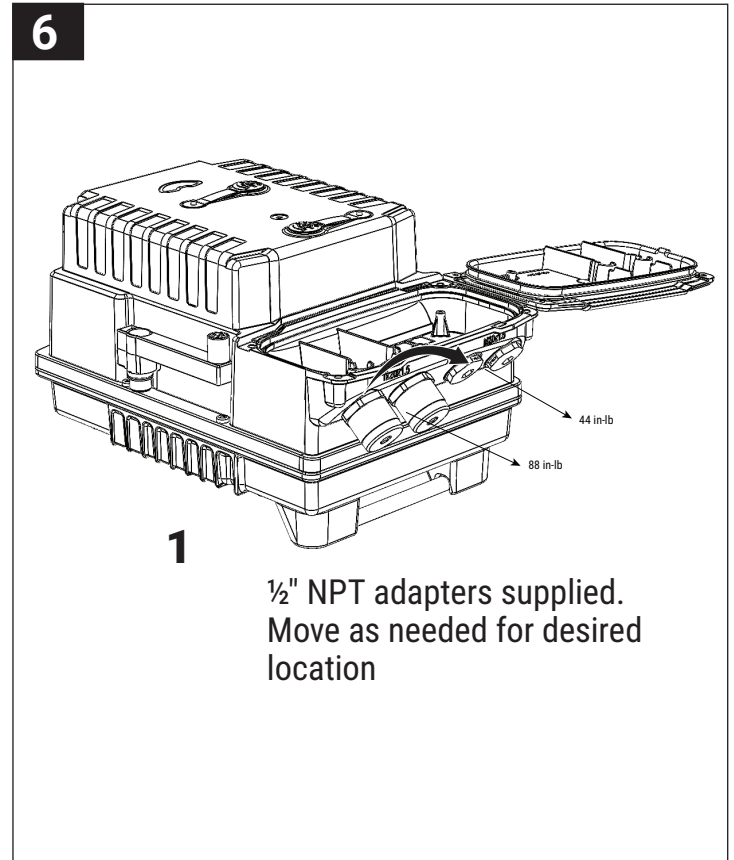
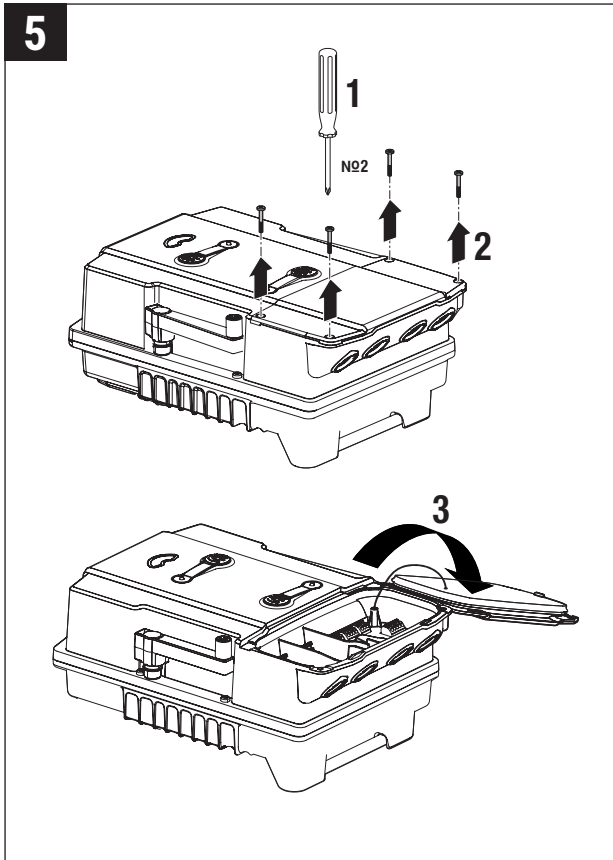


PR and PKR Actuators with VS / VSS & V Ball Valves

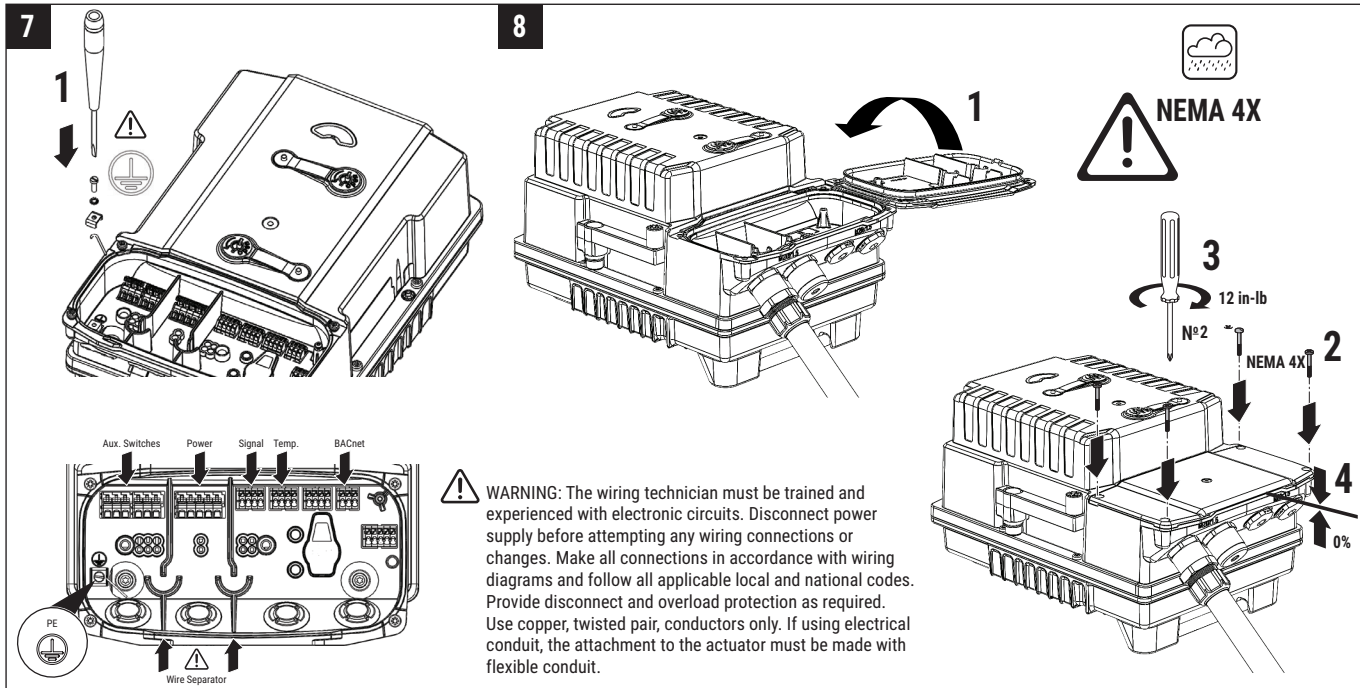


WIRING DIAGRAMS

PR and PKR Actuators

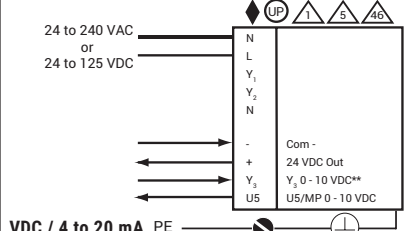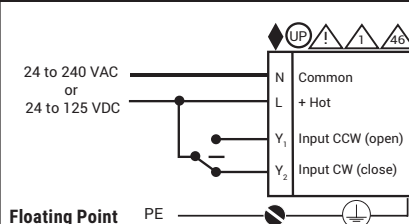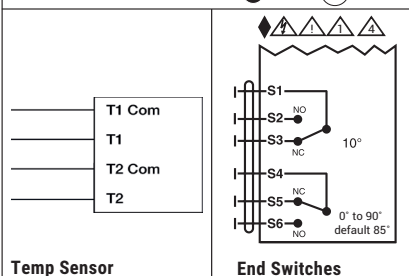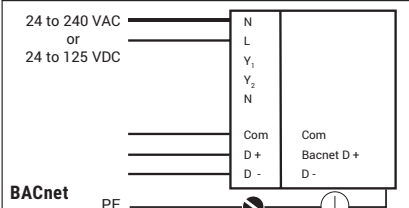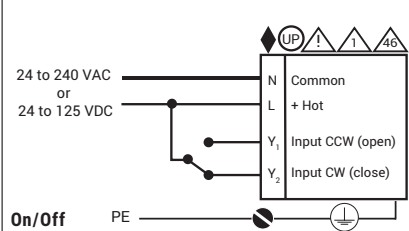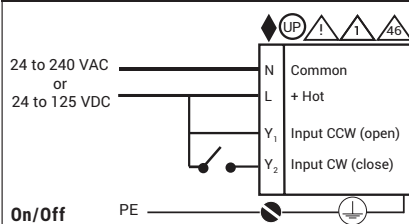

Optional: end switch adjustment

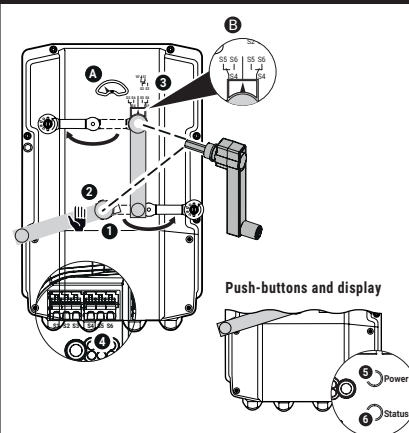

Notes:

- ◆ Meets cULus requirements without the need of an electrical ground connection.
 - ⚠ Provide overload protection and disconnect as required.
 - ⚠ Only connect common to neg. (-) leg of control circuits.
 - ⚠ Two built-in auxiliary switches (2x SPDT), for end position indication, interlock control, fan startup, etc.
 - ⚠ Actuators may be controlled in parallel. Current draw and input impedance must be observed
 - ⚠ Universal Power Supply (UP) models can be supplied with 24 VAC up to 240 VAC, or 24 VDC up to 125 VDC.
 - ⚠ During installation, testing, servicing and troubleshooting of this product, it may be necessary to work with live electrical components. Have a qualified licensed electrician or other individual who has been properly trained in handling live electrical components perform these tasks. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.
- **Control type, direction and fail position changes can be made via Belimo Selection Tools, i.e. ZTH, PC-Tool and App.

⚠ Disconnect power.

- 1 **Gear disengagement**
Open the manual override cover and insert the hand crank. Manual override is possible.
- 2 **Manual override**
Turn the hand crank until **A** indicates the desired switching position and then remove the crank.
- 3 **Auxiliary switch**
Open the auxiliary switch adjustment cover and properly seat the hand crank into the actuator. **B** Turn the crank until the arrow points to the vertical line.
- 4 **Terminals**
Connect continuity tester to S4 + S5 or to S4 + S6. If the auxiliary switch should switch in the opposite direction, rotate the hand crank by 180°.
- 5 **LED Display Green**
Off: No power supply or malfunction, On: In operation
Press button: Triggers test run, followed by standard mode.
- 6 **LED Display Yellow**
Off: Standard mode, On: Test run active.